

ADVANCED PROGRAMMING

Although we design our equipment to resist power failures and electrical surges, electronic equipment in bars and restaurant may from time to time, be subjected to extreme power fluctuations (Spikes or power drops) as well as static electricity spikes that could disable the microprocessor. When this happens, the system will cease functioning or will have an erratic behavior. This erratic behavior could be caused by corrupted data entered in the memory chips that the microprocessor cannot recognize.

Most times, you will be able to restart the system by unplugging it, wait a few seconds and plugging it back on. If that did not work, the following steps will help you restart your system. When you use this procedure, you will reset the memory circuit. Since you have saved your system's settings in a separate memory chip, we will reload them after we have re-started the system.

This is the same procedure that we perform at the factory when we start the system for the first time.

RESETTING YOUR SYSTEM

Steps:

- Unplug the power supply.
- Press and hold the M button as you plug the power supply back on.
- Press the buttons in the following sequence.

ENTER SEQUENCE

SP – R – R – S – M

The system will ask you to enter the function number:

- Press S to reset the memory chip (RAM INITIALIZED).
- Press R to load the default PLU table (interface only).
- Press SP to initialize the system.
- Press L to reload your saved settings.

Press M to enter the set up mode

- Press SP to enter.
- Press M to skip.
- Unplug the power supply to exit.

If you cannot restart your system using these steps, the circuitry was damaged and you should call your dealer for support.

LOST MANAGER KEYS

If you have lost all your manager keys, you will need to order new ones from your dealer.

Upon receiving your new keys, follow these steps:

Steps:

ENTER SEQUENCE

- Unplug the power supply.
- Press and hold the M button as you plug the power supply back on.

Press the buttons in the following sequence.

SP – R – R – S – M

The system will ask you to enter the function number:

- Press the M button.
- Press SP to enter the set up mode

Go to the manager key mode and follow the instructions listed in the programming section.

Apply your newly programmed i-button key to exit the setup mode.