




# Direct draw flow meter installation

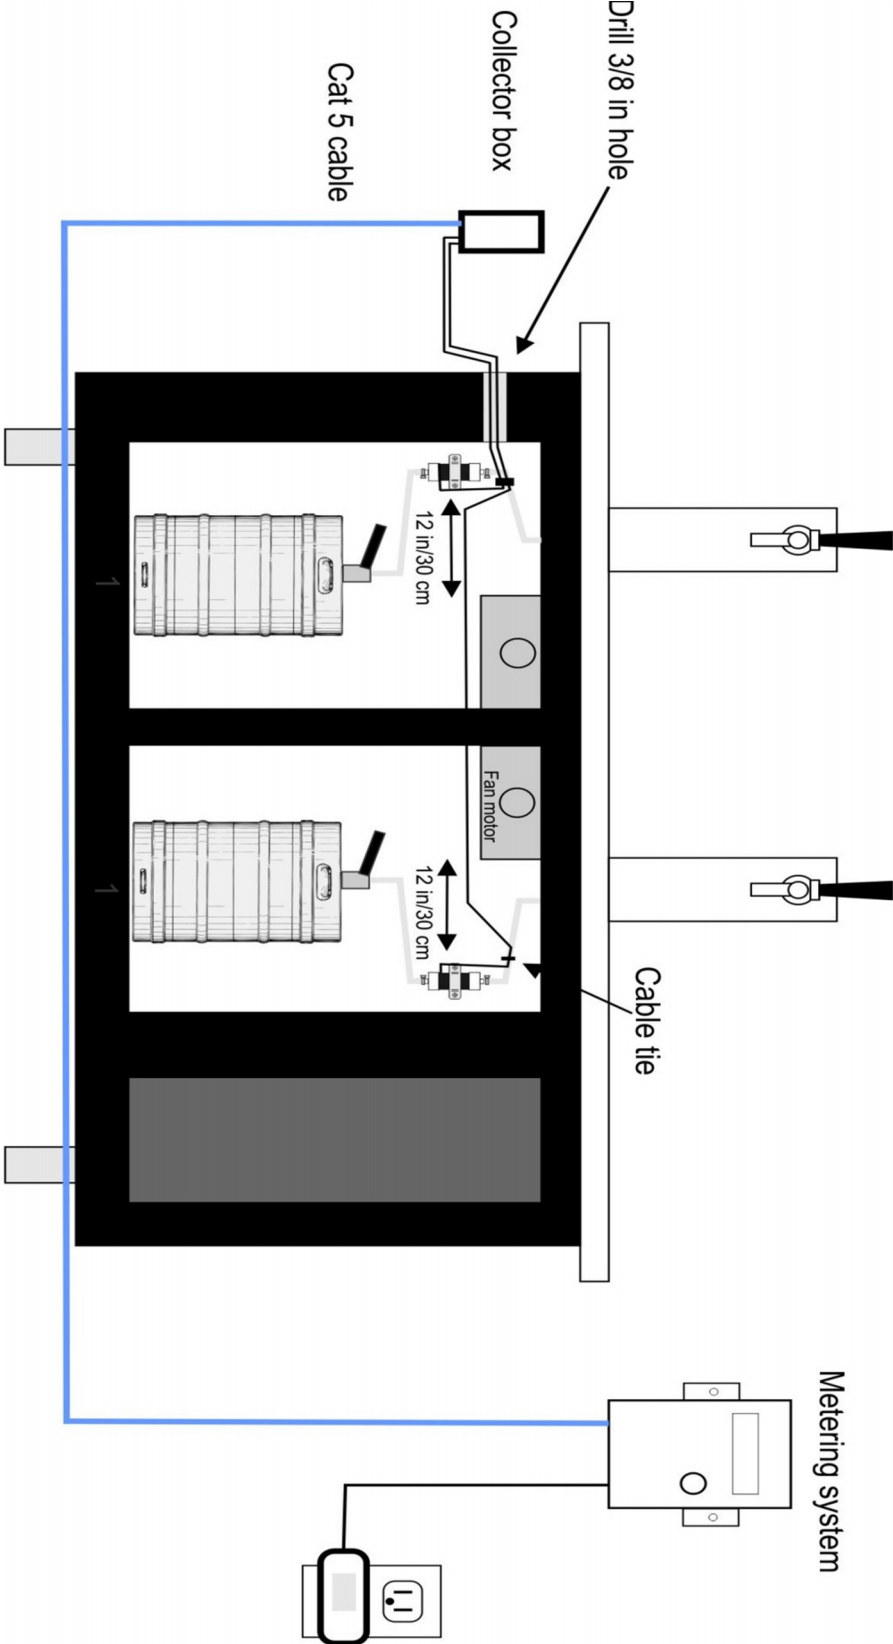



**Caution:** Auper flow meters are sensitive to the magnetic field generated by AC motors or transformers. If installed too close to the fan motor, it can pick up the 50/60 Hz magnetic field generated by the motor when turned on. If that was the case, the metering system would see 50/60 pulses per second generated by the flow meter. To cancel the effect, move the flow meter away from the fan motor (more than 6 in/15cm).

## Instructions

1. Flow meters should be kept 30 cm (12 in) from the fan motor.
2. The flow meters can be secured to the cooler wall using the grey plastic bracket (provided on demand) or, using cable ties and metal screws.
3. Secure each flow meter cable to the tubing on top of the flow meter with a cable tie.
4. Drill a hole (1/4 or 3/8) to pull the flow meter cables out of the cooler.
5. Secure all flow meter cables using cable ties to keep them out of the way when changing kegs.
6. Follow the metering system instructions to connect the flow meters and metering system.